


- 1 Tape the template to the **outside** of the door, aligned with the centerlines.
 - 2 Drill all applicable holes completely through the door (note the exception for the cylinder hole with a mortise device).
- Note :** Drill holes through device shim if using one.

→
Door edge

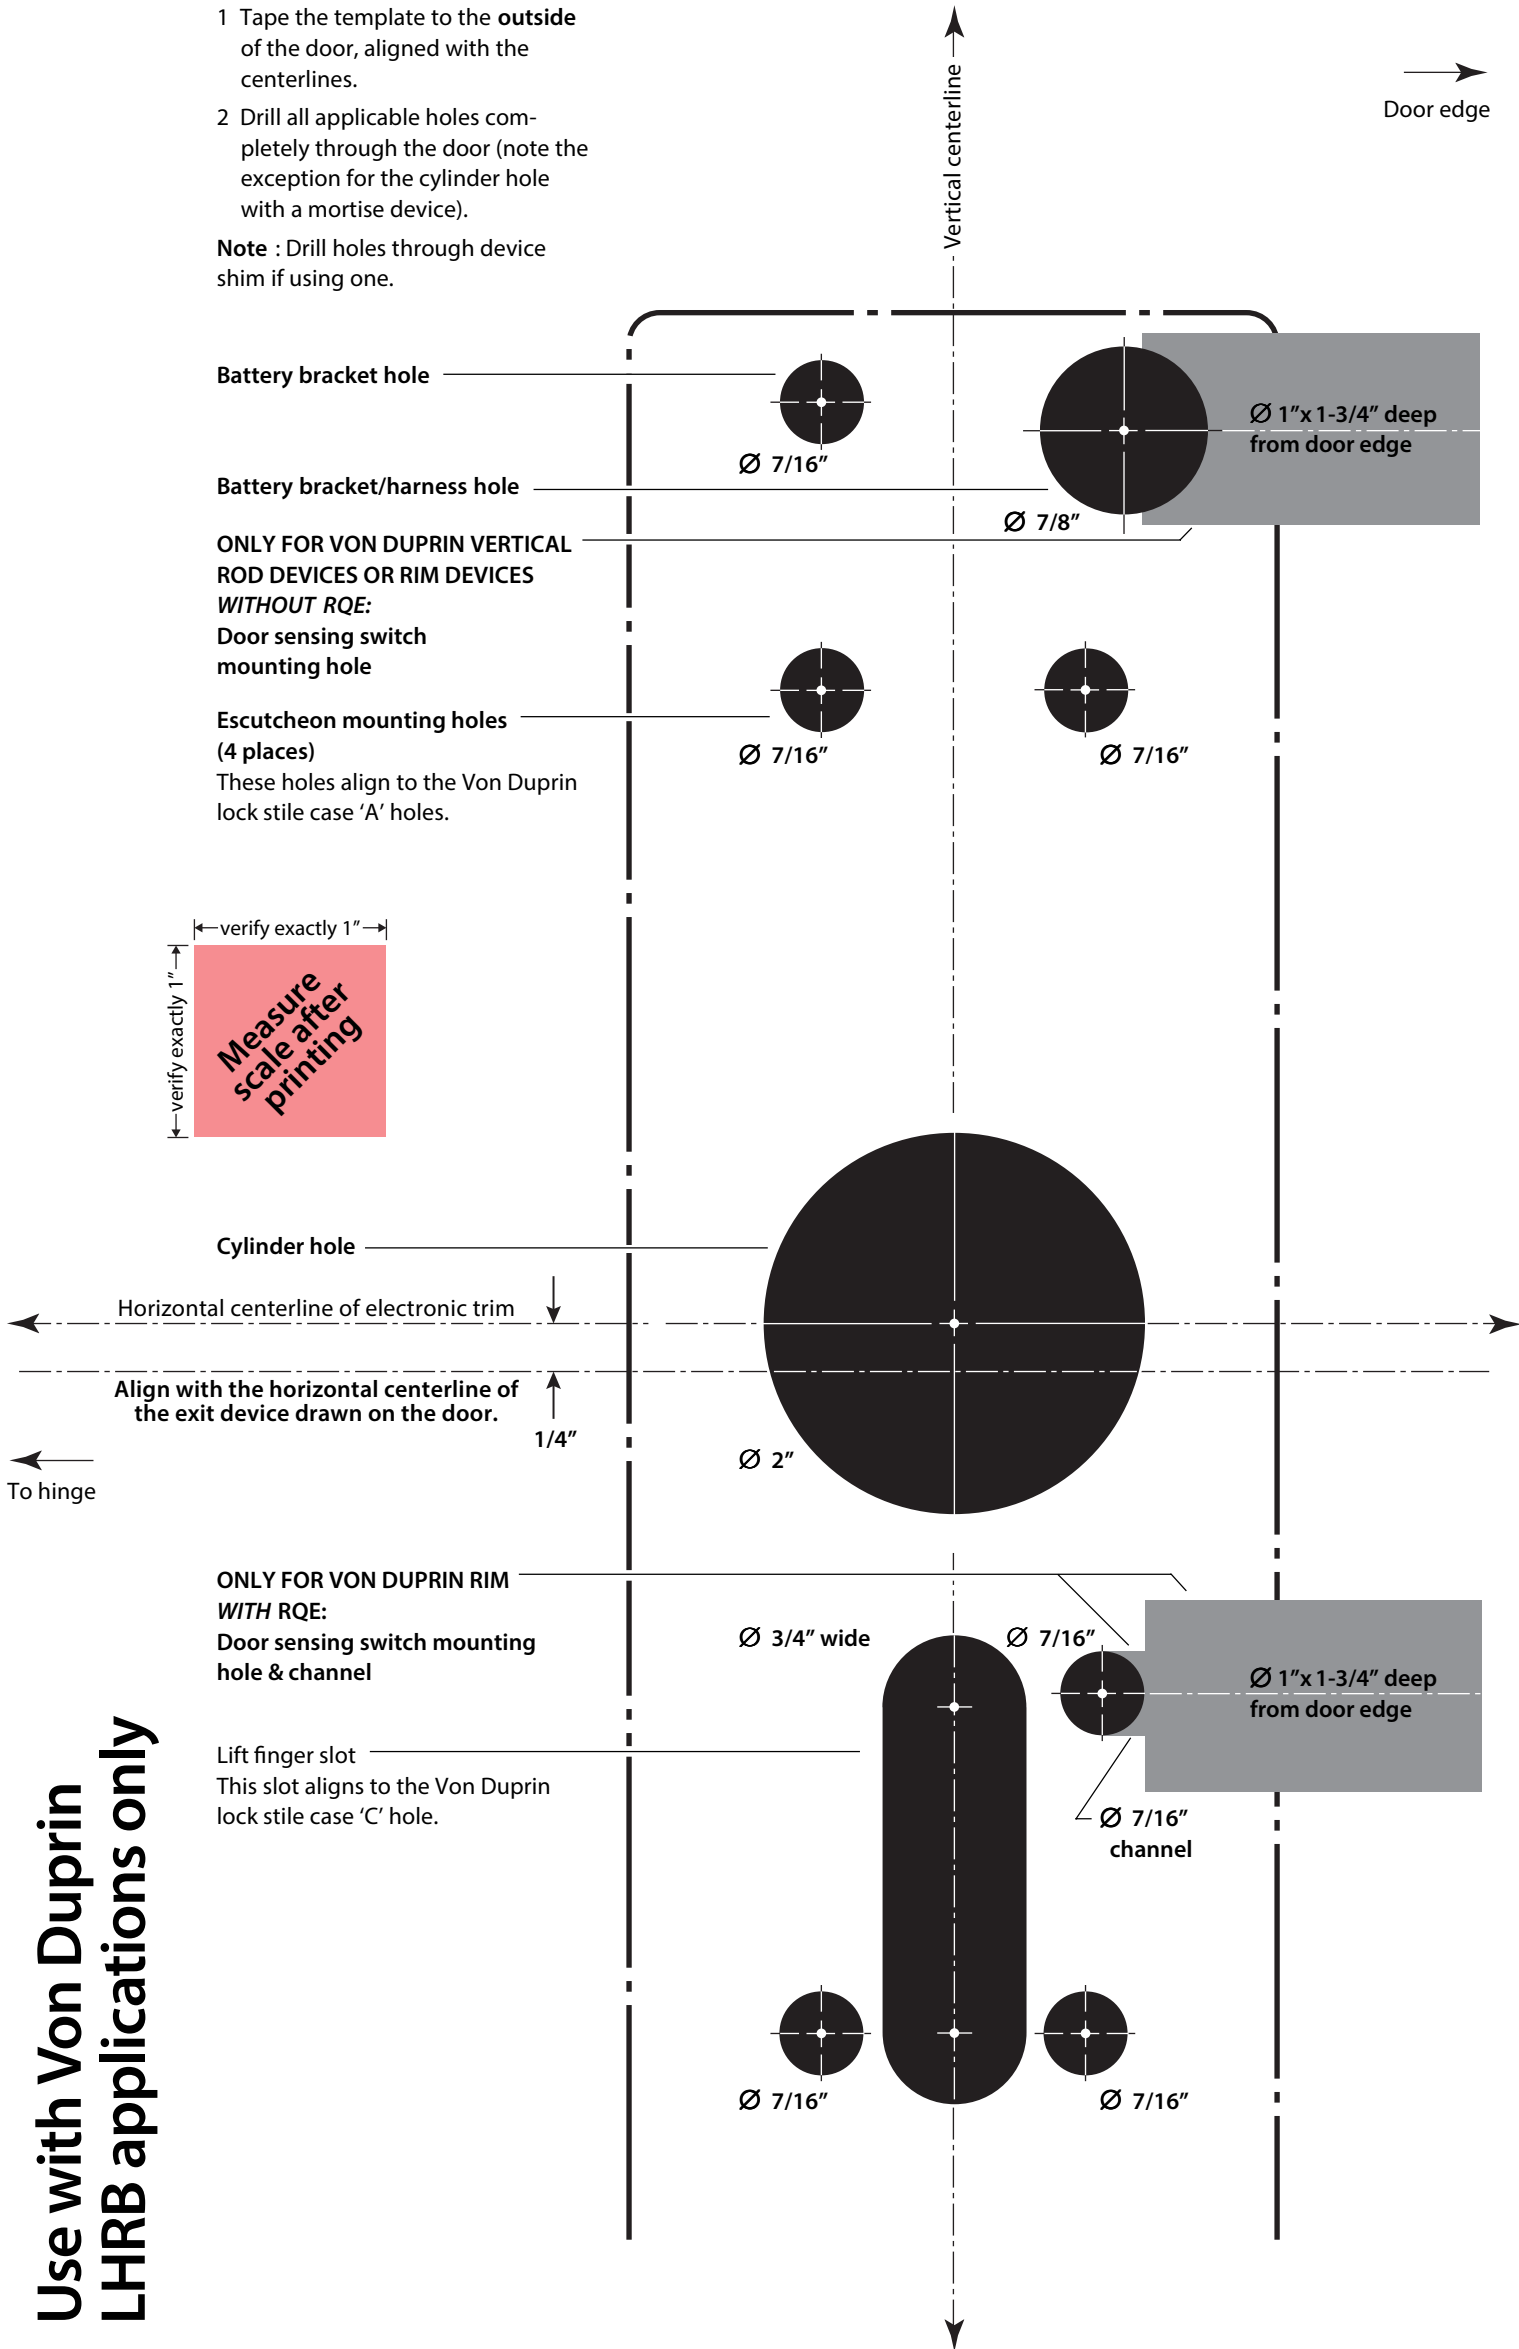

**Use with Von Duprin
LHRB applications only**


Title Installation Template for Wi-Q Technology™ EXQ Exit Hardware Trim for Use with Von Duprin 98/99 Series Exit Devices				BEST ACCESS SYSTEMS		
Series EXQ	Backset NA	Trim style MS, PH, PM, DV	Door thickness 1 3/4" – 2 1/4"	Rev date 02/2017	Template number Q07	Rev C

←
Door edge

↑
Vertical centerline

- 1 Tape the template to the **outside** of the door, aligned with the centerlines.
- 2 Drill all applicable holes completely through the door (note the exception for the cylinder hole with a mortise device).

Note: Drill holes through device shim if using one.

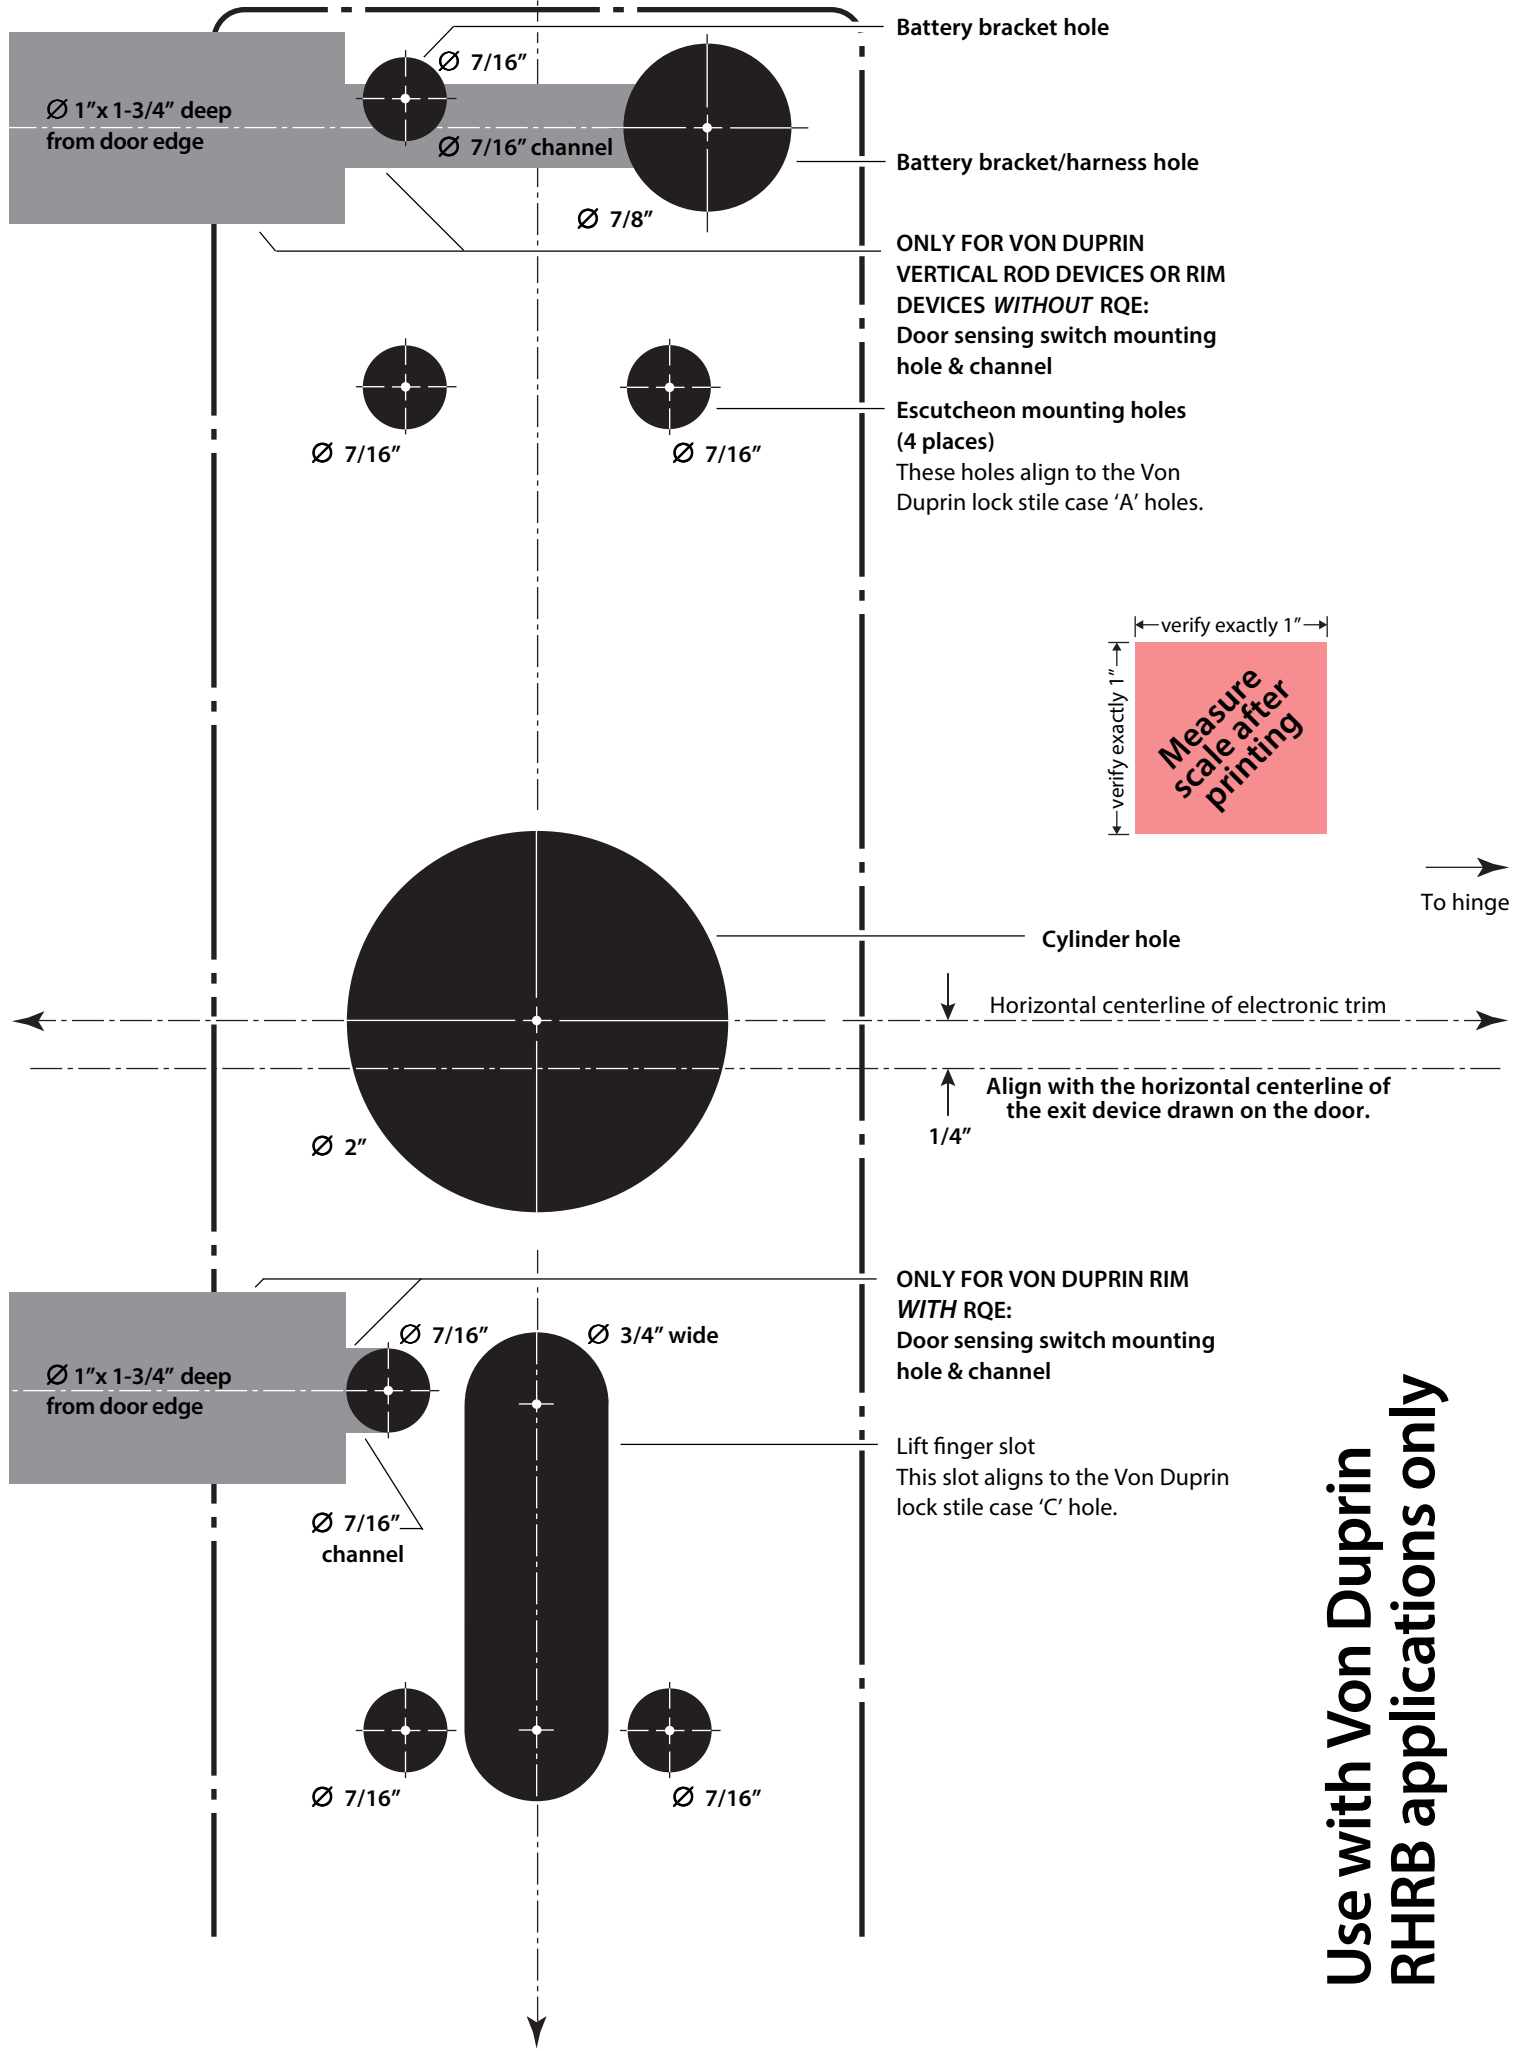

**Use with Von Duprin
RHRB applications only**