

Mark and drill holes

1 Determine the inside and outside of the door.

Note: Use this side of this template for a LHRB door. For RHRB doors, use the other side of this template. For metal doors, see the G09 Template — *Installation Specifications for EXG, EXBV, EXN, and EXZ Exit Hardware Trim for use with Von Duprin 98/99 Series Exit Devices.*

2 Cut this template along the bottom dashed line.

3 For new construction installations:


- a If not already done, mark the horizontal and vertical centerlines of the exit device lock on the outside of the door. These centerlines must directly correspond to the inside centerlines. See the installation instructions provided by Von Duprin for installing the exit device.
- b Place this template on the outside of the door, aligning the arrows to the marked centerlines.

For retrofitting to existing exit device installations:

- a Place this template on the outside of the door, aligning the holes labeled, "Escutcheon mounting holes" to the already drilled holes. See the installation instructions provided by Von Duprin for more information.

4 Tape this template to the door and center punch the drill points.

5 Drill the holes. See the BEST *Installation Instructions for Electronic Stand-alone Exit Hardware Trim (T61828).*

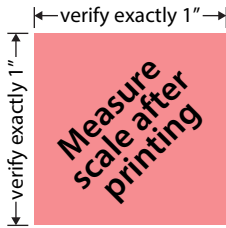

Battery bracket hole – 7/16" dia.
Drill through the door.

Battery bracket/harness hole – 7/8" dia.
Drill through the door.

Escutcheon mounting holes – 7/16" dia.
These holes align to the Von Duprin lock stile case 'A' holes. Drill both holes through the door.

Align with the vertical centerline of the exit device lock drawn on the door.

Horizontal centerline of electronic trim

Align with the horizontal centerline of the exit device drawn on the door.

1/4"

OPTIONAL outside cylinder hole – 2" dia.
Drill only for devices with outside cylinders.

For rim and vertical rod keyed exit devices, drill this hole through the door.

Lift finger slot – 3/4" wide.
This slot aligns to the Von Duprin lock stile case 'C' hole. Drill through the door.

Escutcheon mounting holes – 7/16" dia.
These holes align to the Von Duprin lock stile case 'A' holes. Drill both holes through the door.

Outside escutcheon outline
For reference only.

Cut the template along this line.

Title Installation Template for EXG, EXBV, EXN and EXZ Exit Hardware Trim for Use with Von Duprin 98/99 Series Exit Devices				BEST ACCESS SYSTEMS		
Series EXG, EXBV, EXN, EXZ	Backset NA	Trim style MS, PH, PM, DV, KP	Door thickness 1 3/4" – 2 1/4"	Rev date 02/2017	Template number G07	Rev E

Mark and drill holes

1 Determine the inside and outside of the door.

Note: Use this side of this template for a RHRB door. For LHRB doors, use the other side of this template. For metal doors, see the G09 Template — *Installation Specifications for EXG, EXBV, EXN, and EXZ Exit Hardware Trim for use with Von Duprin 98/99 Series Exit Devices.*

2 Cut this template along the bottom dashed line.

3 **For new construction installations:**

- a If not already done, mark the horizontal and vertical centerlines of the exit device lock on the outside of the door. These centerlines must directly correspond to the inside centerlines. See the installation instructions provided by Von Duprin for installing the exit device.
- b Place this template on the outside of the door, aligning the arrows to the marked centerlines of the exit device lock.

For retrofitting to existing exit device installations:

- a Place this template on the outside of the door, aligning the holes labeled, "Escutcheon mounting holes" to the already drilled holes. See the installation instructions provided by Von Duprin for more information.

4 Tape this template to the door and center punch the drill points.

5 Drill the holes. See the BEST *Installation Instructions for Electronic Stand-alone Exit Hardware Trim (T61828).*

