


INSTALLATION INSTRUCTIONS

FIRE BOLT: FOR LESS BOTTOM ROD

1. PREPARE BOTH ACTIVE AND INACTIVE DOORS AS SHOWN BELOW
2. INSERT FIRE BOLT ASSY IN 3/4 DIA HOLE IN INACTIVE DOOR SECURE IN PLACE WITH (4) #6 X 3/4 DIA FH WOOD SCREW OR #6-32 FH METAL SCREW
3. INSTALL BLACK STRIKE HOLE PLUG IN 1 DIA HOLE IN ACTIVE DOOR




STRIKE HOLE PLUG

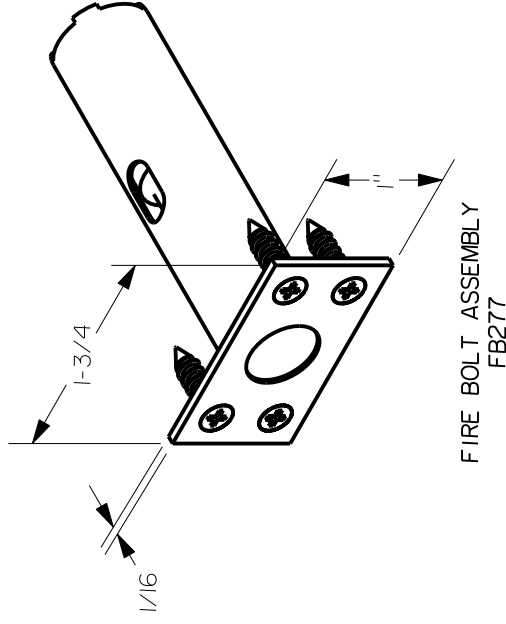

FIRE BOLT ASSEMBLY
FB277

DIMENSIONS PROVIDED IF DOOR
MANUFACTURER DESIRES TO MORTISE LIP

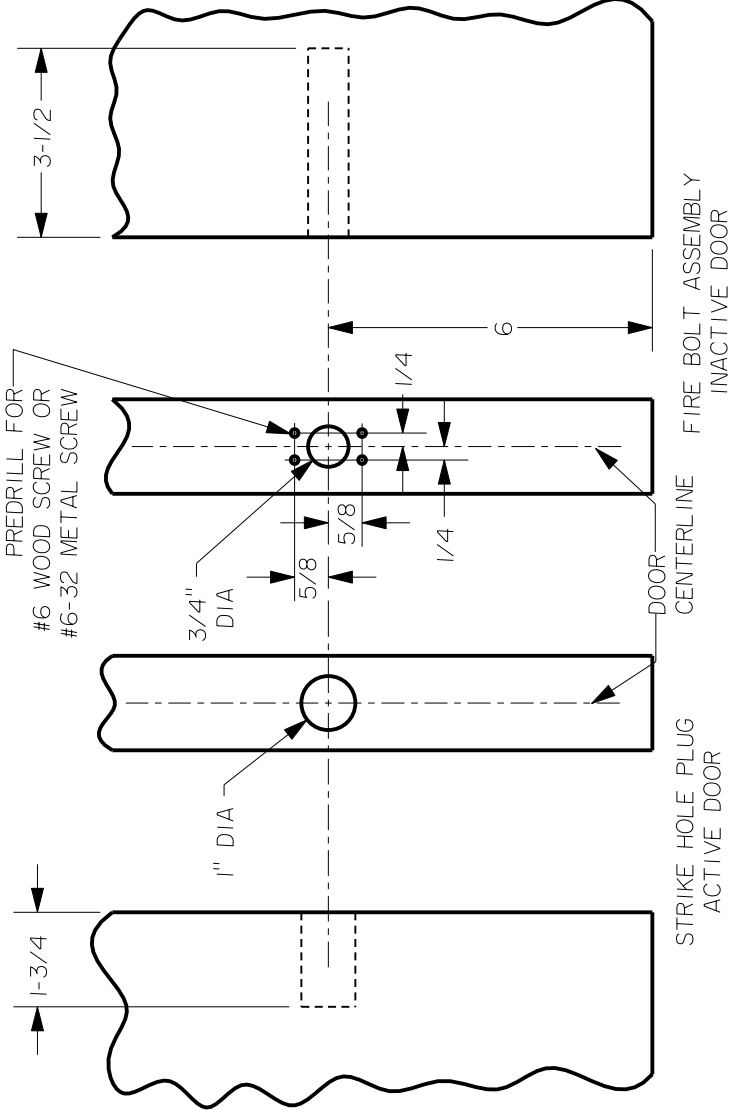

STANLEY

phi[™]

DRWG 01297-11-000 DATE 5/1/03 REVISION A

Precision Hardware
a Division of Stanley Security Solutions, Inc.
www.stanleysecuritysolutions.com