

STANLEY
OMNILOCK®

Installation Addendum for Stanley Omnilock 45HOM Extreme Weatherized Locks

45HOM Extreme Weatherized Mortise Locks

This addendum begins at step 11 of *Installation Instructions for Stanley Omnilock 45HOM Mortise Locks T83312*.

- 1 Insert the escutcheon standoffs into the predrilled holes.
- 2 Thread connecting cables, motor wire and grounding wire through the door cable hole. Use screws and washers to attach the escutcheon from the inside of the door. See Figure 1.

Note: Ensure that no wires are pinched when attaching the escutcheon to the door.

- 3 Thread the connecting cables motor wire and grounding wire through the module bracket wire inlet.
- 4 Attach the module bracket to the door with the proper mounting screws.
- 5 Connect the wires and batteries as shown in Figure 2.
- 6 Secure the module cover with the security screws provided. See Figure 3.
- 7 Continue with step 14 of the *Installation Instructions for Stanley Omnilock 45HOM Mortise Locks T83312* to complete the installation.

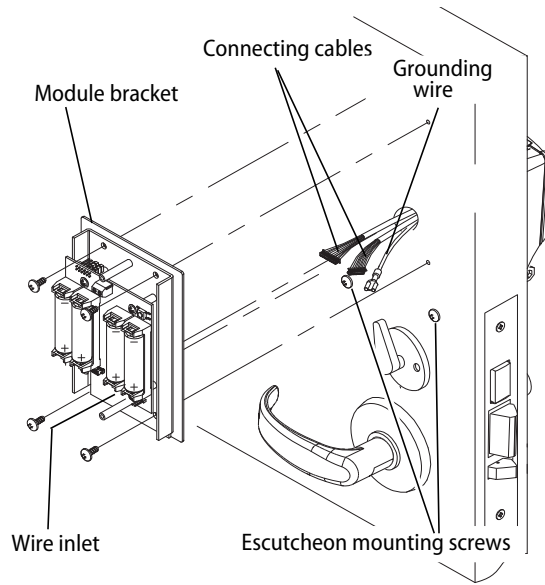


Figure 1 Inside circuit module

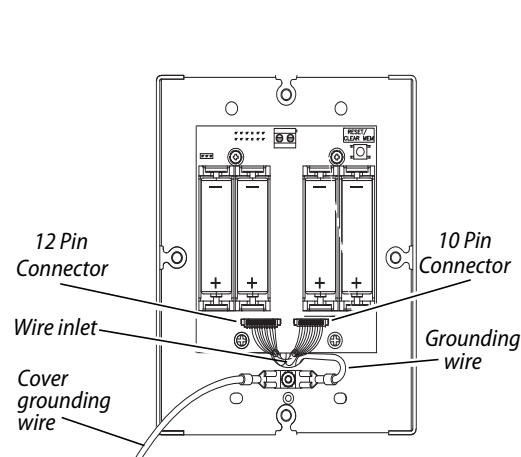


Figure 2 Wire connections to circuit module


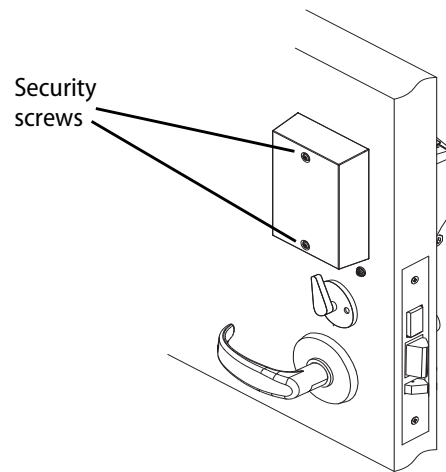


Figure 3 Inside view of weatherized model




Align to vertical centerline

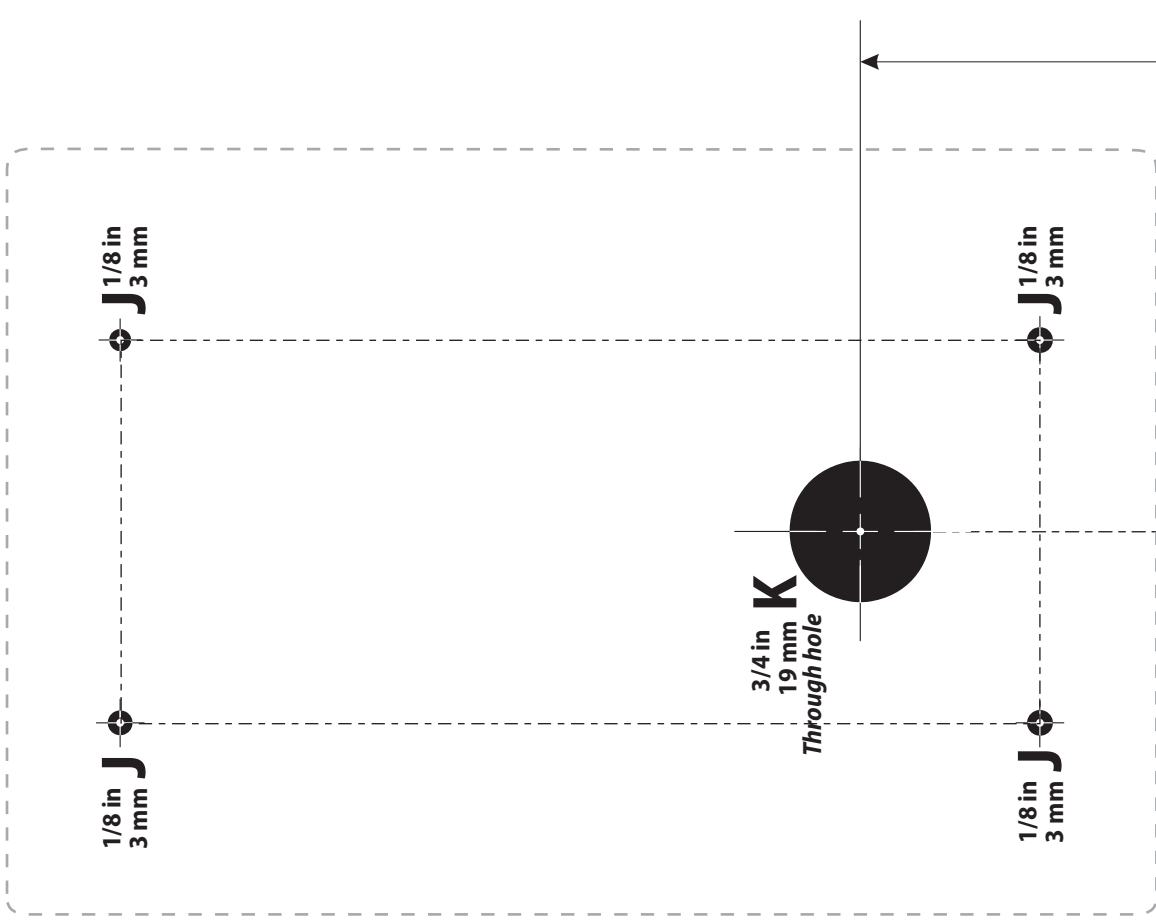


Hole Descriptions

- B** Thumb turn (1) *TV model only*
- C** Lever (1)
- D** Trim mounting (2)
- F** Module bolt (2)
- H** Thumb turn mounting screws (2) *TV model only*
- J** Weatherized module bolts (4)
- K** Cables

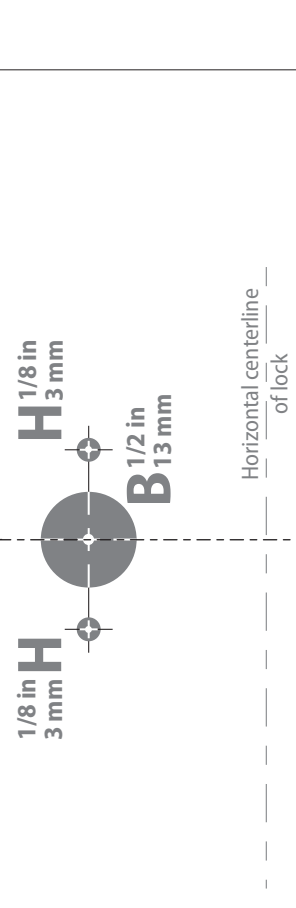

Inside Door

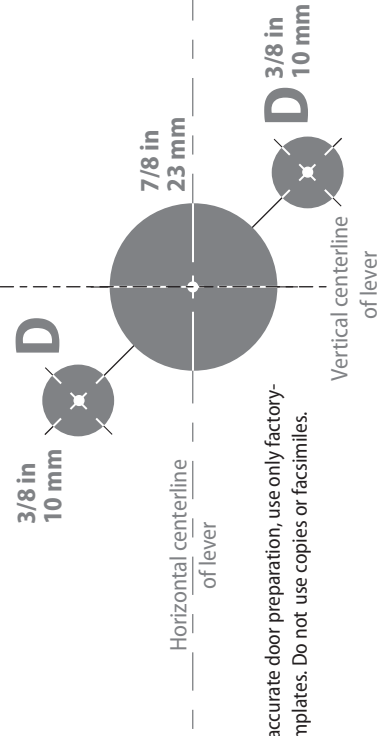

To ensure accurate door preparation, use only factory-printed templates. Do not use copies or facsimiles.