


Template for 2 3/4" Backset 6K, 7KC, 8K and 9K Cylindrical Locks with RQE

Caution: For 7KC and 9K locks ONLY, drill a 5/16" dia. hole above and below the 2 1/8" hole. To ensure proper alignment of the through-bolts and levers, use a KD303 drill jig. The "C" style rose on the 6K and 8K locks will NOT cover these holes.

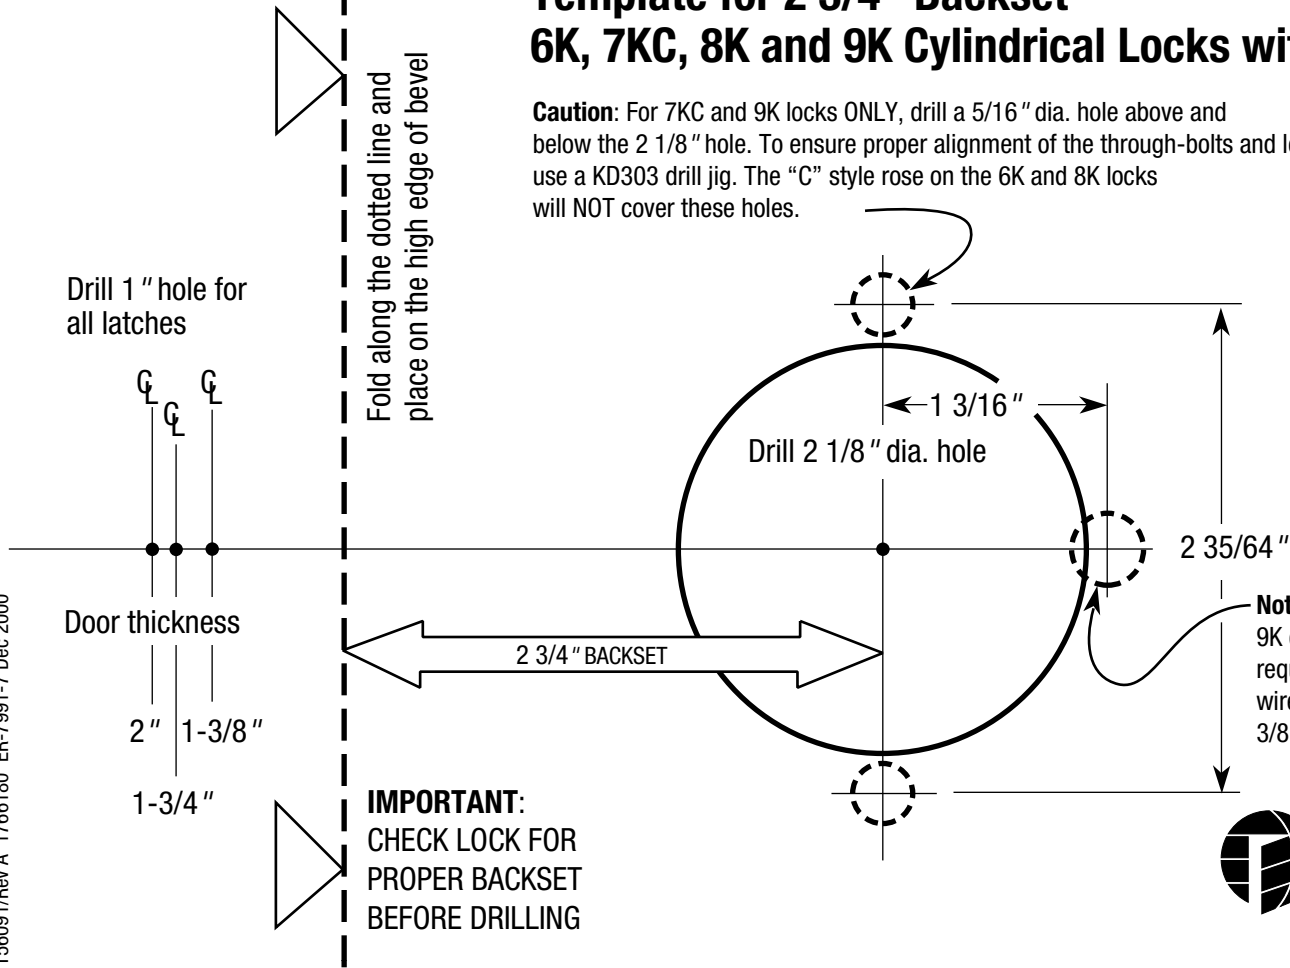

IMPORTANT:
CHECK LOCK FOR
PROPER BACKSET
BEFORE DRILLING

