


Template for 2 3/8" & 2 3/4" Backset 72T/82T & 73T/83T Tubular Deadbolt Locks

Drill 1" hole for
all latches

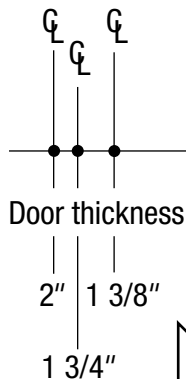

Fold along the dotted line and
place on the high edge of bevel.

Mark center
and drill
2 1/8" dia. hole

72T & 82T Series – 2 3/8" Backset

73T & 83T Series – 2 3/4" Backset

IMPORTANT
Check the lock
backset before drilling.