Notes

1. Before drilling, refer to *Q06 Template — Installation Template for 45HQ Stanley® Wi-Q™ Electronic Mortise Locks* (T81606) for additional holes not shown here.
2. The maximum door-to-frame gap is 3/16 in. (4.8 mm).
3. Allow 3/64 in. (1.2 mm) clearance for the stike box thickness.
4. For metal doors, lock case support is required from the door manufacturer.
5. Tap for a #12-24 machine screw or drill for a #12 wood screw (a combination screw is supplied).
6. Not all lock functions have a deadbolt. Function TV has a deadbolt; function DV does not.
7. **Lock case holes**:

C **Cylinder hole** — 1 1/4 in. (32 mm) dia.

F **Thumb turn access hole** — 5/8 in. (13 mm) dia.

G **Trim mounting hole** — 3/8 in. (10 mm) dia. (two required)

H **Lever hole** — 7/8 in. (23 mm) dia.

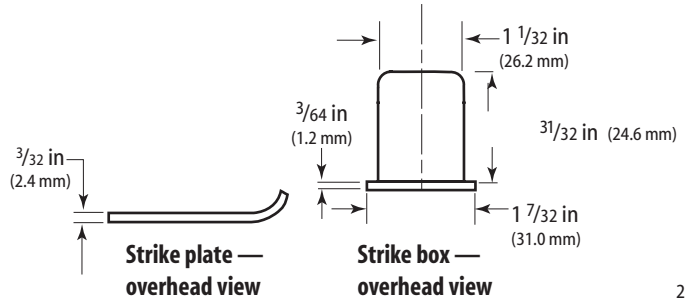

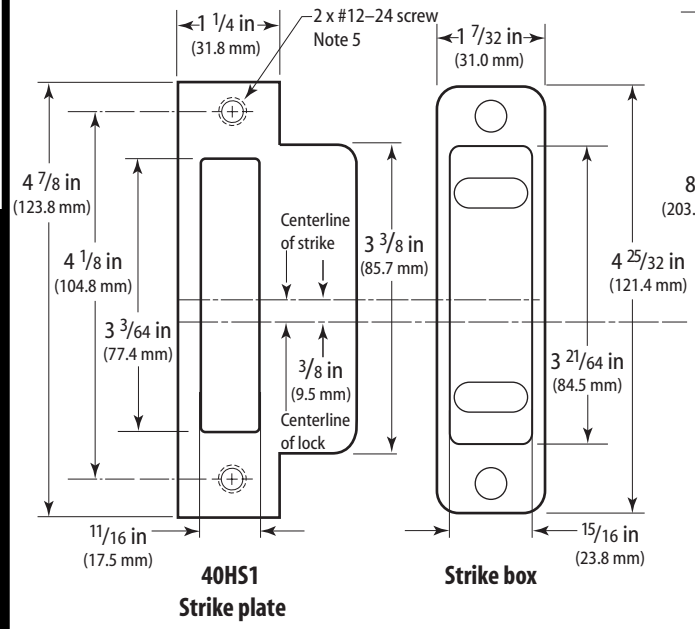

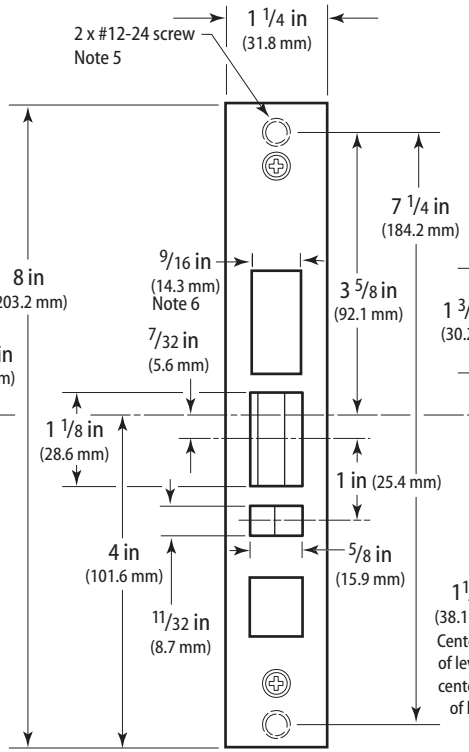

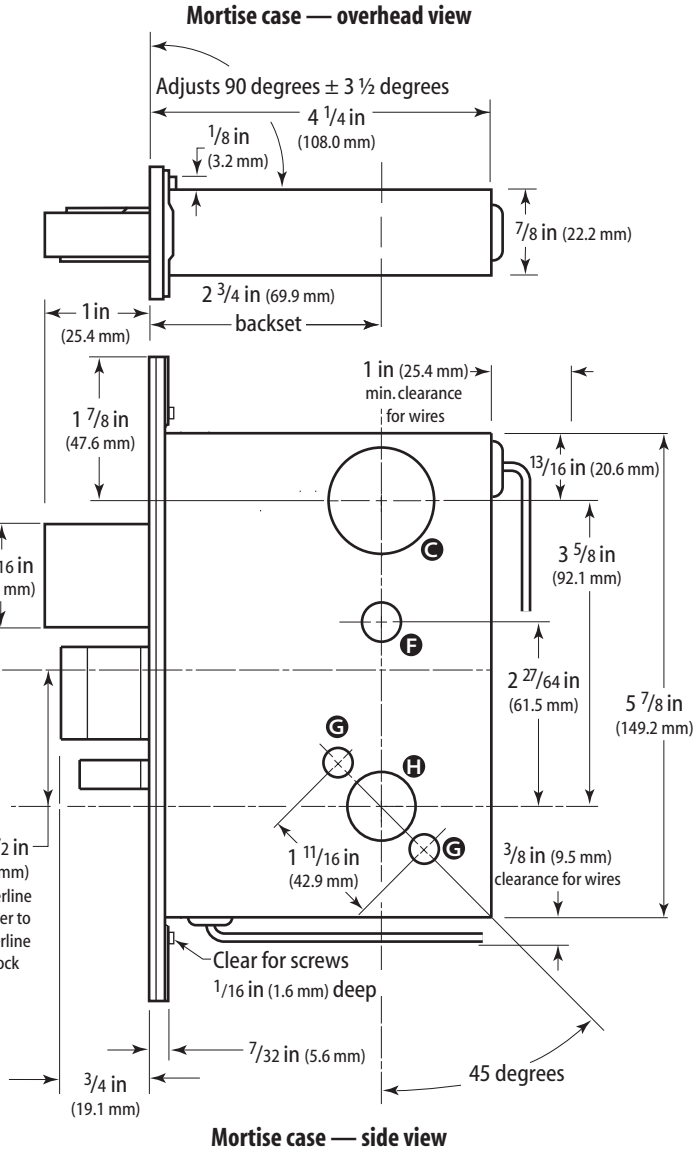

Series	Backset	Trim style	Door thickness	Rev date	Template number	Rev
45HQ	2 3/4"	DV, MS, PH, PM	1 3/4" to 5"	2/2009	Q03	A

Title: Installation Specifications for 45HQ Stanley® Wi-Q™ Electronic Mortise Locks

BEST ACCESS SYSTEMS